

Installation Quick Guide

VestasOnline OPC Server ver 1.10.0 and higher

Document Number: 0067-7234 V03

1 How to install VestasOnline OPC Server

NOTE

This software installation process requires:

- .NET 4.6 must be installed on the VOBOPC Server PC
- Any existing version of VOBOPC Server must be removed before installing a new version. You can run the *unins000.exe* in the install folder or use the Add/Remove programs feature of Microsoft Windows.

1.1.1 Procedure

1. Download the VOBOPCServer software package to the VOBOPC Server PC.
2. Unzip the software package.
3. Run CMD as Administrator to open command prompt.
4. Use CD command to find the folder with installation files
5. Run VOBOPCServerInstall.exe as Administrator.
6. Click Next / Install / Finish / Close in the dialogs that appear.
7. Copy the **VOBOPCServer.scc** file that you have received from Vestas to this folder:

c:\ProgramData\Vestas\VOBOPCServer\VOBOPCServer.scc

The .scc file is created by a Vestas SCADA technician and contains information about the wind power plant(s), which VestasOnline® Business sites that can be connected, port numbers to be used and access credentials.

8. Start **VOBOPCDataAccessClient.exe** (located in "c:\Program Files (x86)\Vestas\VOBOPCServer\") to verify the access to the VestasOnline® Business sites.
9. Read the log file in "c:\Vestas\Logs\OPCServers\VOBOPCServer\" to check for connection or configuration issues.

Vestas Confidential and Proprietary Information

The information contained in this document constitutes Confidential and Proprietary Information of Vestas Wind Systems A/S and cannot be copied, forwarded, made available or disclosed to any third party without the advance written consent of Vestas.

vestas.com

Vestas®